

## **IR Temp. Sensor Replacement**

### Tools Included:

- Key
- Small flat screwdriver
- 5/32" Allen wrench

## IR Temperature Sensor Replacement

1. Open the door to the Control Box (need key).




2. The IRT sensor is located at the end of the arm extending south of the tower.



3. Remove any cable ties holding down the cable, and then using the Allen wrench, remove the IRT from the bracket.



4. Follow the cables all the way into the Control box.
5. Loosen the appropriate terminals.

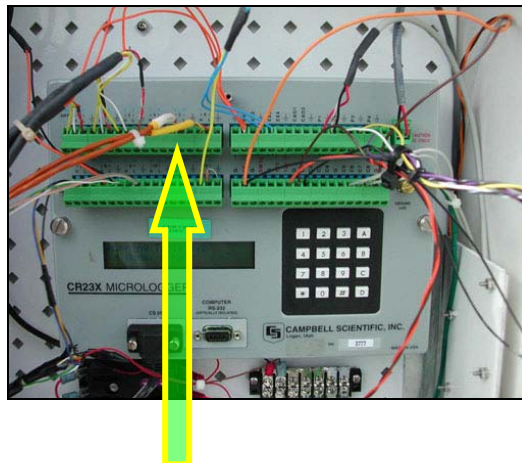

6. Installation is the opposite of removal.
7. Return faulty sensor and tools to NOAA-ATDD. Thanks!